




Bougault 3310 Instructions

www.rotomudscrapers.com



The zinc angle bracket with the slot is fastened to the "C" Channel with a 1" carriage bolt and nut.

Slide the scraper in the slot so that it is offset minimum 3/4" from the edge of the tire on a 4" wide tire like this one.

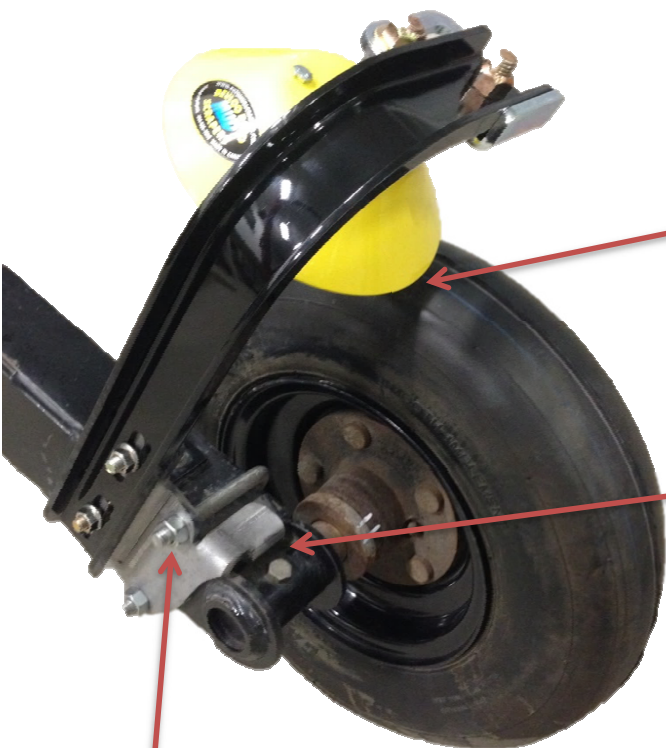

Keep approximately 1/8" space between the scraper and the tire.

Lean the base bracket back and slide the tab into the slot of the Bourgault arm here.


Tip the bracket forward and install the Ubolt to hold the base bracket in place.

Ubolt



Bougault 3310 Instructions

www.rotomudscrapers.com

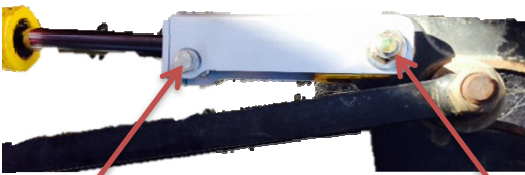

Lock the Ram Stopper in place
with 3/8" x 2.75" Bolt

Replace pin with pipe bushing and 1/2 x 3" Bolt

