




Bourgault 3320/3335 PLS--PLD Instructions

www.rotomudscrapers.com

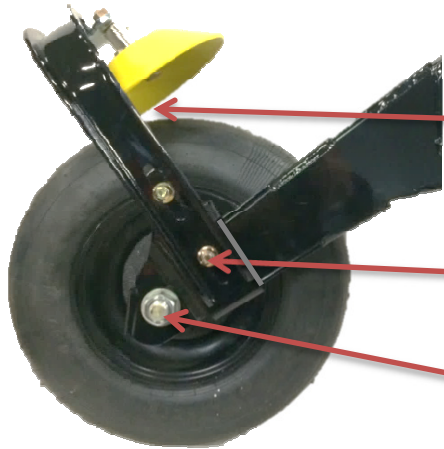

Keep approximatley 1/8 " space between the scraper and the tire.


Adjust the scraper distance from tire with the 3/8" bolts and nuts here.

Tighten the base bracket with the existing Bourgault Spindle bolt and nut.



The zinc angle bracket with the slot is fastened to the "C" Channel with a 1" carriage bolt and nut.

Slide the scraper in the slot so that it is offset minimum 3/4" from the edge of the tire on a 4" wide tire like this one.

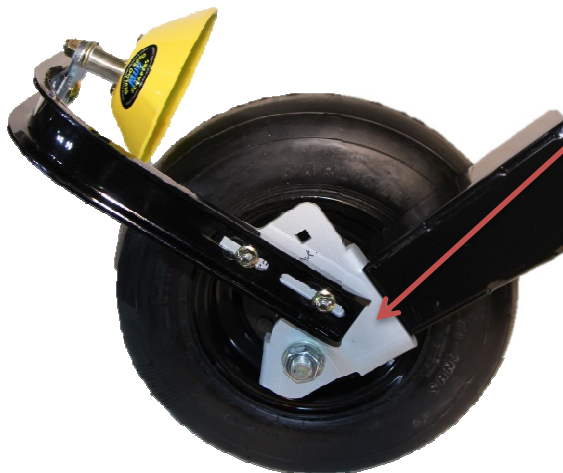

NOTE: There is two positions to mount the "C" chanel.

The position leaning back is only used to avoid hitting the frame.

The forward / higher positon is the preferred position.