




CIH 400/NH P2050/Flexi Coil 5000 HD/SD 440 Instructions

www.rotomudscrapers.com

Use a straight edge (Carpenters Square) and adjust the scraper in the slot so that the scraper is at 3/4" minimum from the side of the tire.

On 2016 Models, bearing is under the disk

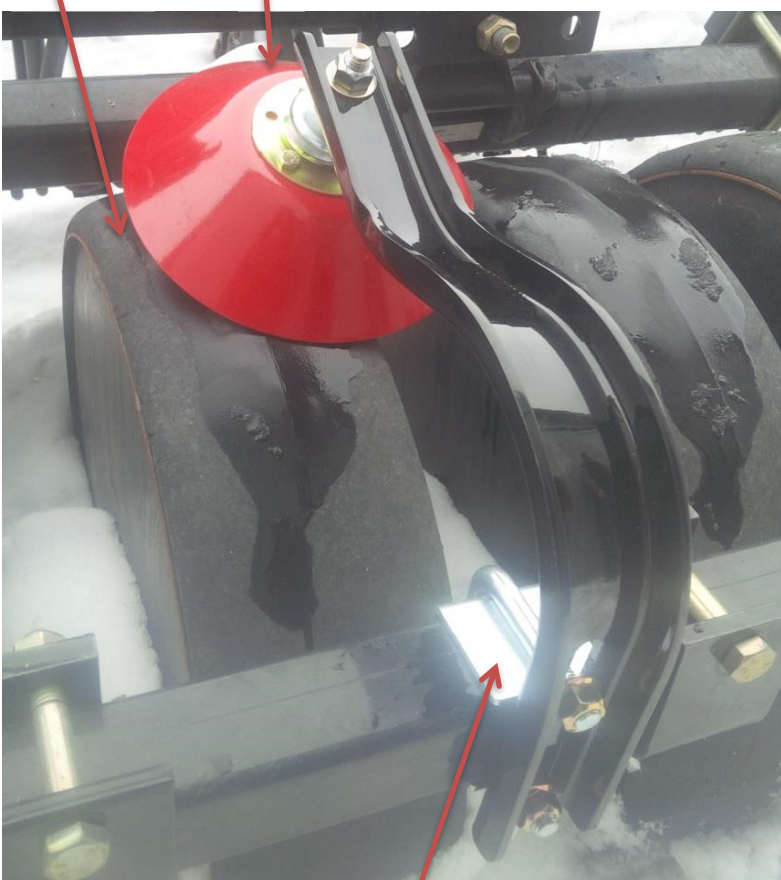

Put zinc channel over square tube and mount bracket on opposite side so that the tabs on channel fit into the slots on the bracket.

Fasten Ubolt over channel and tighten so disk is 1/8" from tire