




CIH 800 - NH P 2070 Instructions

www.rotomudscrapers.com

Put these 3/8" nuts on the 1" carriage bolts loosely until the final step of adjusting the space between the scraper and the tire.

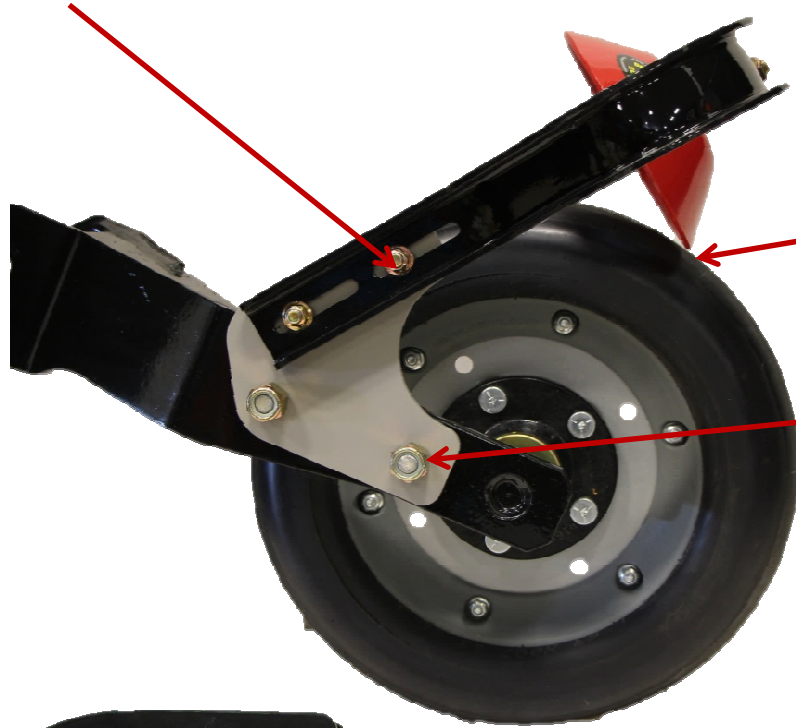

Keep approximately 1/8" space between the scraper and the tire.

Remove the factory scraper and replace it with the Rotating Mud Scraper using the existing bolts.



Make sure to place the scraper 3/4 inch from the edge of the tire to increase performance.

NOTE FOR MARK

For new style brackets will
be needed where the main frame
wheels might hit the scrapers