




DBS Instructions

www.rotomudscrapers.com

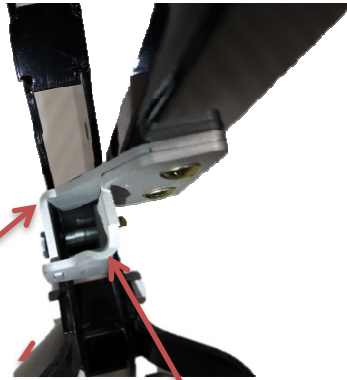

Put the "90" Degree bent iron with tab together with the "Z" shaped iron with slot and the upper "C" Channel using the 3/8 x 1.25" bolts and nuts provided. Then drop it into the DBS arm and fasten it in place with the 7/16 x 2.5" Bolt.



Adjust the scraper approximately 1/8" space between the tire.



Adjust the scraper so that it is flush with the edge of the tire by sliding it in the slot here.