


K HART 3611 Instructions

www.rotomudscrapers.com

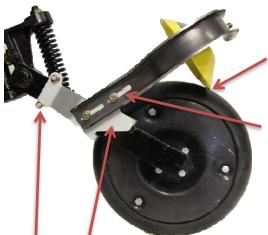

Adjust the scraper so that it has approximately 1/8" space between the tire.

Adjust the distance from the tire here

Face front of bracket downward and slide the hooks over the opener arm and then twist the front of the base bracket upward to position so that the Ubolt can be installed

Ubolt is to be installed just in front of the spring assembly



TOP VIEW

Adjust the scraper left and right in the slot on the angle bracket.

Slide the scraper so that it is even with the edge of the tire.