




## K-HART 4612 SCRAPER INSTRUCTIONS

[www.rotomudscrapers.com](http://www.rotomudscrapers.com)

The zinc angle bracket is fastened to the "C Channel" with a 1" carriage bolt and nut.

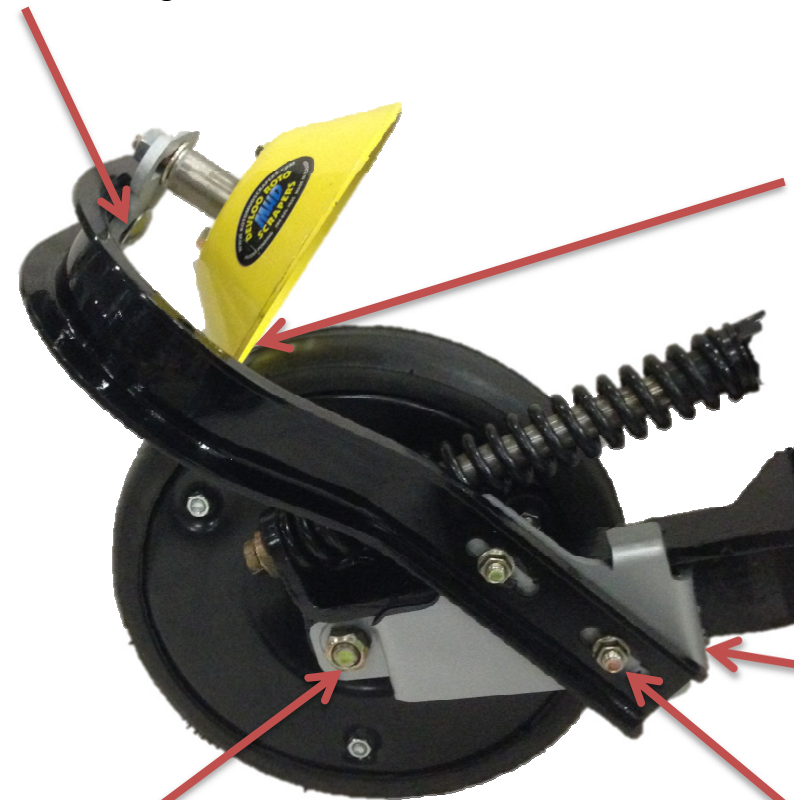

Keep approximately 1/8 " space between the scraper and the tire.

Slide the base bracket forward from the back with the notch hooked under the K-Hart arm.

Adjust the scraper distance from tire with the 3/8 bolts and nuts here.

Tighten the base bracket with the existing K-Hart wheel bolt.

### TOP VIEW



Adjust the scraper left and right in the slot on the angle bracket.

Slide the scraper so that it is even with the edge of the tire.

