




## Morris C1 Instructions

[www.rotomudscrapers.com](http://www.rotomudscrapers.com)

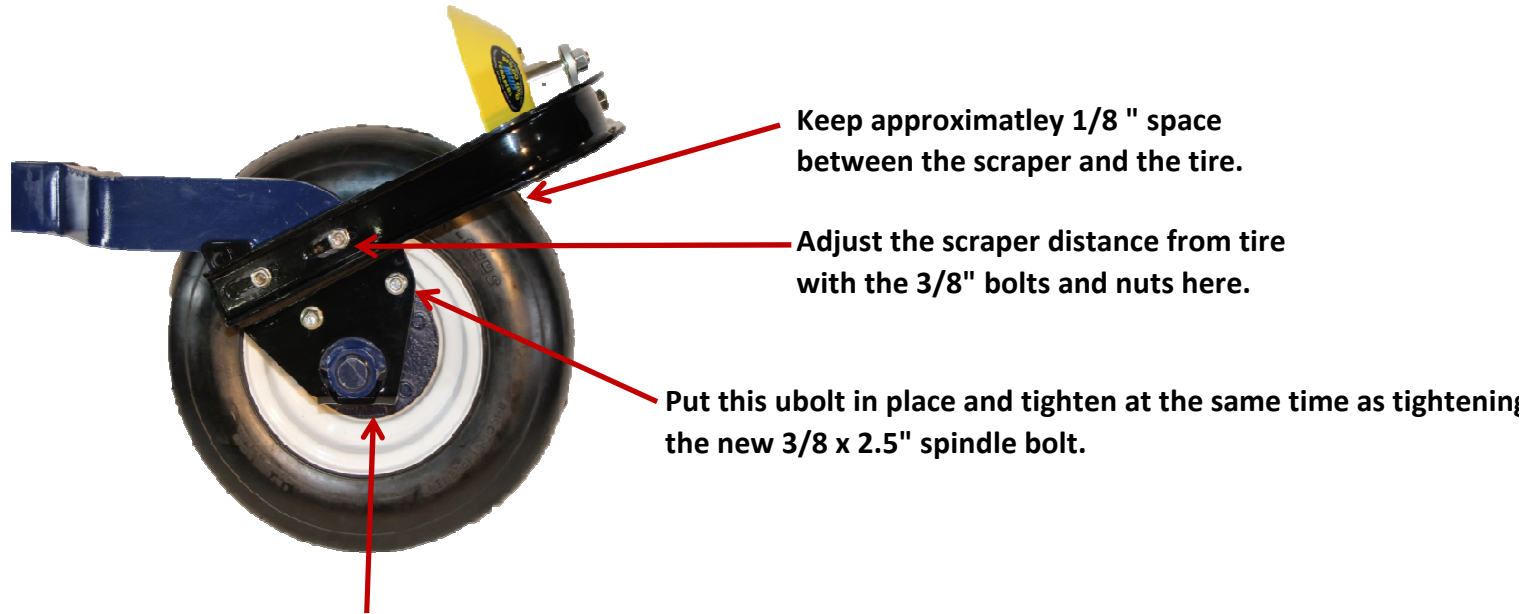

Remove the 3/8" bolt and slide the new bracket over the spindle. Replace the bolt with the longer 3/8 x 2.5" bolt provided. Make sure the ubolt is in place then tighten both to secure the base bracket.

