




Morris C2 Instructions

www.rotomudscrapers.com

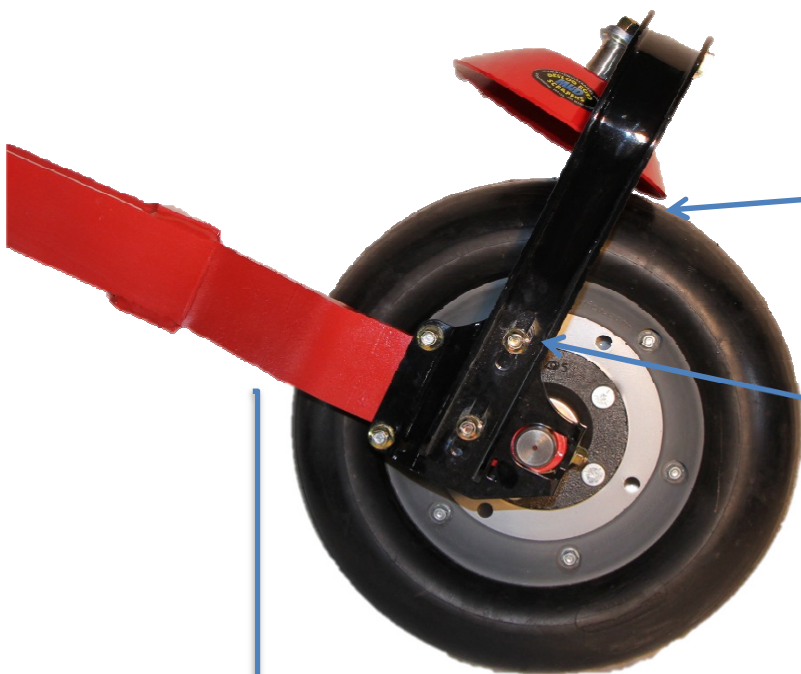

Keep approximately 1/8 " space between the scraper and the tire.


Adjust the scraper distance from tire with the 3/8" bolts and nuts here.

This is what we call a "Left Hand Opener Arm"
The arm is on the left hand side of the tire
Use base bracket with "L" cut into steel
50% of the brackets have "L" cut into them



Slide the scraper in the slot so that it is offset minimum 3/4" from the edge of the tire on a 4" wide tire and 1" from the edge of the tire on a 5.5" Otico Tire

The zinc angle bracket with the slot is fastened to the "C" Channel with a 1.25" carriage bolt and nut.

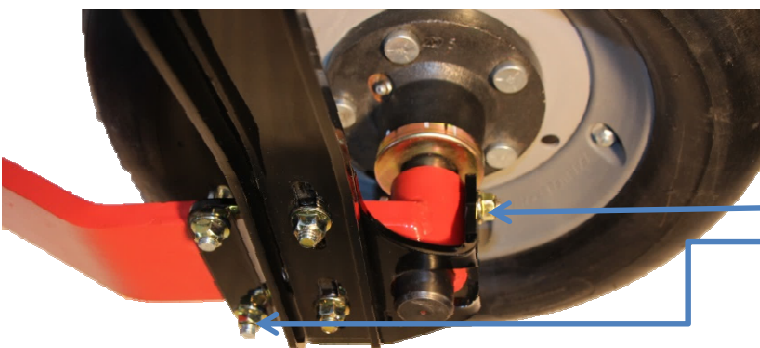

Remove the 3/8" bolt and slide the new bracket over the spindle. Replace the bolt with the longer 3/8" bolt provided.

Make sure the Ubolt is in place then tighten both to secure the base bracket.