




## MORRIS QUANTUM 2022 W/CAST ARM

[www.rotomudscrapers.com](http://www.rotomudscrapers.com)

Put these 3/8" nuts on the 1" carriage bolts loosely until the final step of adjusting the space between the scraper and the tire.

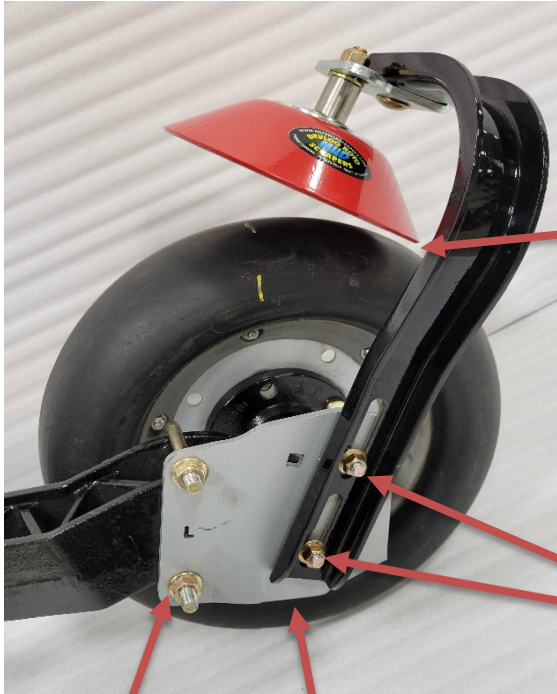

Keep approximately 1/8" space between the scraper and the tire.

1. Start by inserting the 3/8 carriage bolts through the base plate (grey in this picture). This is where the upper bracket slides to adjust the scraper to 1/8" from the tire.

2. Replace the 3/8 inch hex bolt in the spindle below with the new 3/8 longer hex bolt provided. This will allow for the thickness of the bracket.

3. Use the ubolt to fasten the grey base bracket (normally black).



4. Make sure to place the scraper 3/4 inch from the edge of the tire to increase performance.

Do this by adjusting the bolt in the slot here.

