




Pottinger Instructions

www.rotomudscrapers.com


Use three 3/8 x 1.25" bolts to fasten support brace and upper bracket here

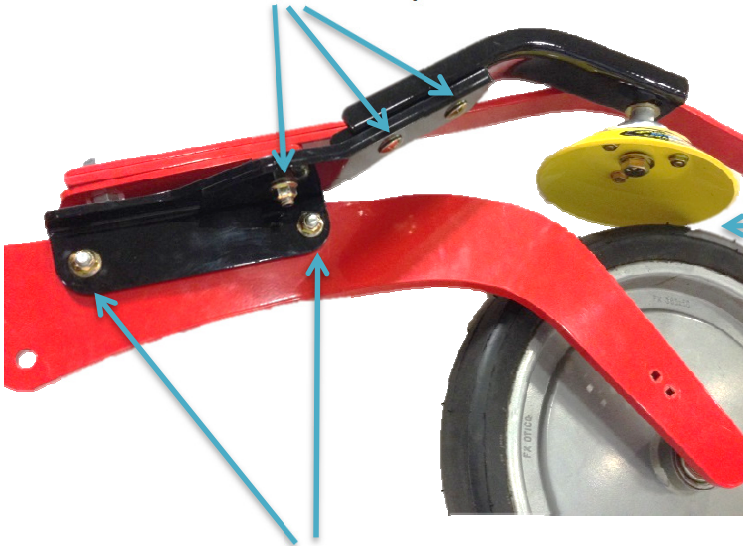

1/8 Inch between tire and scraper

Use 3/8 x 1.5" Bolts to fasten here

Position the scraper so its flush with edge of tire

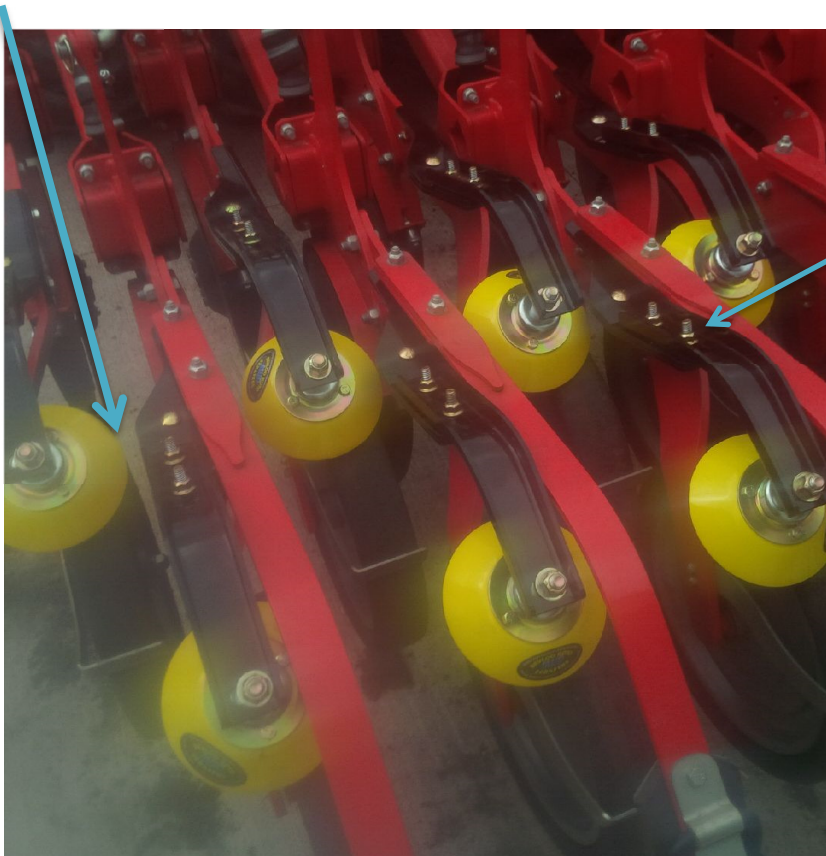

Use these slots to adjust the distance between the scraper and the tire