


Versatile Scraper Instructions

www.rotomudscrapers.com



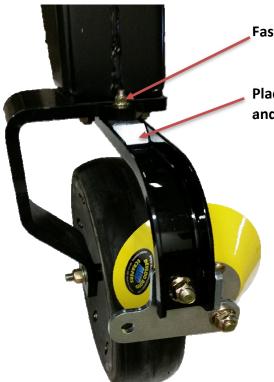

Fasten both C chanel here with the two 3/8 bolts provided

Place zinc plated C chanel here to space the black C chanel and keep the dirt out